


425-6162 '14+ Caprice Console

Installation Instructions



Remove (4) OEM screws using a 5/32 hex head driver.

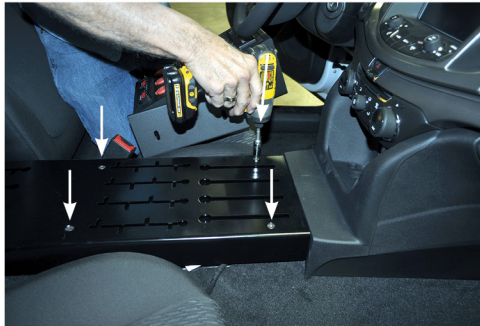

Place Jotto Desk Console on top of OEM floor plate, lining up holes of console with OEM holes.



Using provided (4) socket button head cap screws, secure console into place. Short screws (2) in the back and long screws (2) in the front of console.

If you have questions or need further assistance please call Technical Support: 1.877.455.6886